


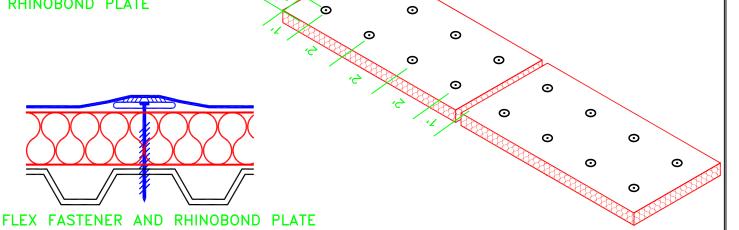

FLEX RHINOBOND PLATE

2' X2' RHINOBOND FASTENING PATTERN

PERIMETER & CORNER ATTACHMENT TO MEET FM 1-120 GUIDELINES



NOTES:

- 1) PERIMETER AND CORNER AREAS ARE DETERMINED IN ACCORDANCE WITH ASCE-7:
 - ⅓0 LEAST PLAN WIDTH OR
 - % ROOF HEIGHT BUT NOT LESS THAN 4 FT.
- 2) BOARDS CROSSING PERIMETER/CORNER AREA INTO FIELD AREA SHALL BE ATTACHED ACCORDING TO RESPECTIVE PERIMETER/CORNER RATES.
- 3) FOR HEIGHT > 60 FT, CORNER IS "L" SHAPED WITH DIMENSIONS (2 X "PERIMETER").

TITLE

FLEX RHINDBOND FASTENING 2X2

DETAIL NO. R-3

DRAWN BY:

DATE:

SK

12/2013

APPLICABLE TO ALL FLEX RHINDBOND ATTACHED ROOFING SYSTEMS

FLEX MEMBRANE

2670 LEISCZ'S BRIDGE RD. LEESPORT, PA 19533 800-969-0108 INTERNATIONAL FlexRoofingSystems.com